Havis, Inc.
75 Jacksonville Road, PO Box 2099
Warminster, PA 18974
T 800-524-9900 F 215-957-0729
www.havis.com

INSTALL INSTRUCTIONS C-TTB-CV-F
FULL SIZE TRUNK TRAY
1995-2009 FORD CROWN VICTORIA

TOOLS REQUIRED:

Ratcheting wrench
Sockets - 7/16", #10, #8
Screwdriver set
Wrench – 7/16"

HARDWARE:

QTY	DESCRIPTION	PART #
2	Front mounting bracket **(item 2)**	S-1-TA001HBS2-004
6	¼" x ¾" Hex head bolt **(item 4)**	GSM33001
18	¼" Flat washer **(item 5)**	GSM31005
10	¼" Nylock nut **(item 6)**	GSM30016
2	Driver/Pass side mounting bracket **(item 7)**	CM000701
4	¼" x 1" Hex head bolt **(item 14)**	GSM33002
4	¼" x 1" Fender washers **(item 16)**	GSM31014

Always!

- Read all instructions before installing any Havis, Inc. products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

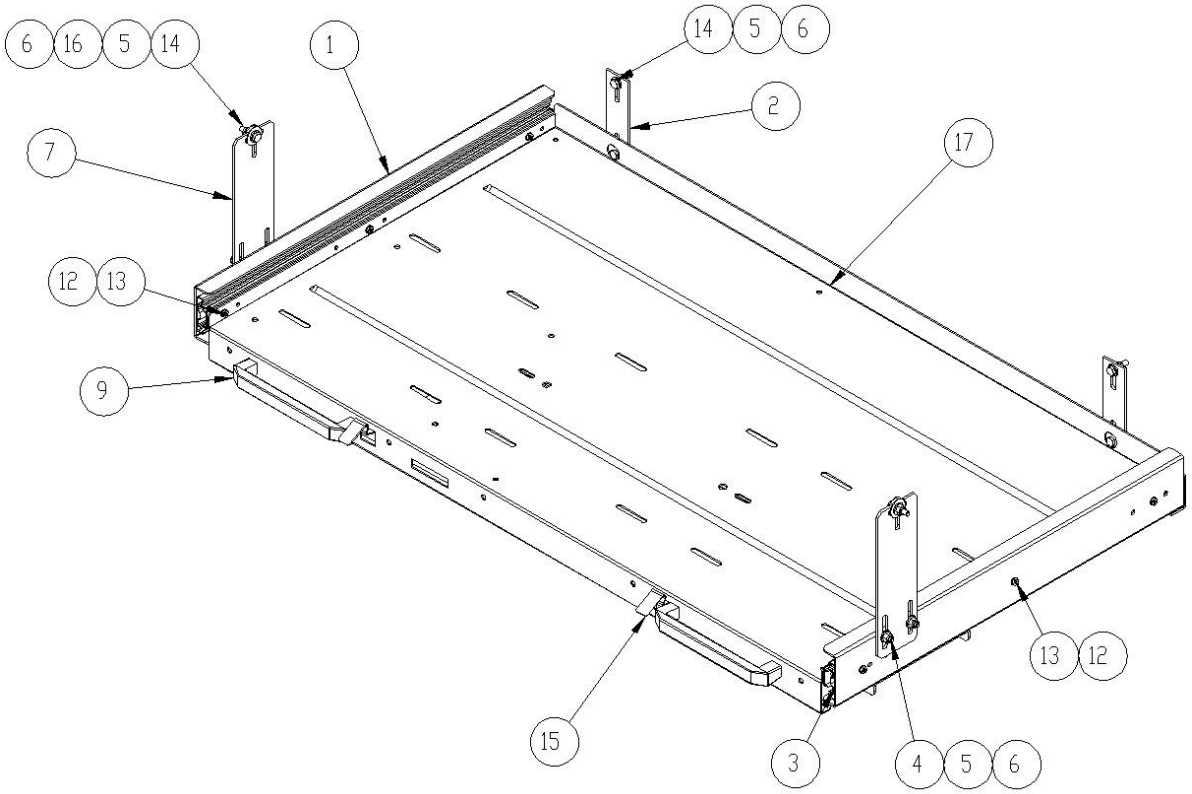

Ford Crown Victoria Police Interceptor trunk

Remove spare tire and tire jack from trunk

Position trunk tray on top of trunk deck

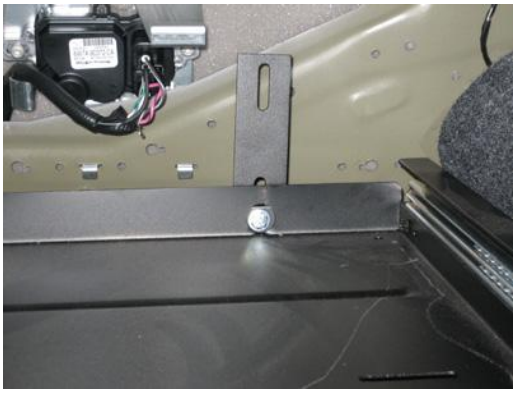

Loosely attach front mounting bracket to trunk tray assembly using ¼" x ¾" Hex bolt and serrated nut.

Loosely attach front mounting brackets to vehicle using ¼" x ¾" Hex bolts, washer and serrated nut.

Center and lower tray to maximize height for equipment
Tighten all hardware

Loosely attach Driver/Pass side mounting brackets to trunk tray using ¼" x ¾" Hex bolts, washers and serrated nuts.

Loosely attach Driver/Pass side mounting brackets to vehicle as shown in photo above using ¼" x ¾" Hex bolts, washers and serrated nuts.

Center and lower tray to maximize height for equipment
Tighten all hardware.